

SONY

Sony DCR-PC1E	●
Sony DCR-PC2E	●
Sony DCR-PC3E	●
Sony DCR-PC4E	●
Sony DCR-PC5E	●
Sony DCR-PC6E	●
Sony DCR-PC7E	●
Sony DCR-PC10E	●
Sony DCR-SC100E	●
Sony DCR-TRV5E	●
Sony DCR-TRV6E	●
Sony DCR-TRV7E	●
Sony DCR-TRV8E	●
Sony DCR-TRV9E	●
Sony DCR-TRV10E	●
Sony DCR-TRV11E	●
Sony DCR-TRV15E	●
Sony DCR-TRV17E	●
Sony DCR-TRV110E	●
Sony DCR-TRV120E	●
Sony DCR-TRV125E	●
Sony DCR-TRV130E	●
Sony DCR-TRV210E	●
Sony DCR-TRV220E	●
Sony DCR-TRV230E	●
Sony DCR-TRV235E	●
Sony DCR-TRV310E	●
Sony DCR-TRV320E	●
Sony DCR-TRV325E	●
Sony DCR-TRV410E	●
Sony DCR-TRV420E	●
Sony DCR-TRV430E	●

Sony DCR-TRV510E ●

Sony DCR-TRV520E ●

Sony DCR-TRV530E ●

Sony DCR-TRV725E ●

Sony DCR-TRV890E ●

Sony DCR-TRV7000E ●

Sony DCR-TRV7100E ●

Sony DCR-TRV8000E ●

Sony DCR-TRV8100E ●

Sony DCR-VX700E ●

Sony DCR-VX1000E ●

Sony DCR-VX9000E ●

Sony DSR-200P ●

Canon

Canon MV 1	●
Canon MV 3	●
Canon MV 3MC	●
Canon MV 10	●
Canon MV 20	●
Canon MV 30	●
Canon MV 100	●
Canon MV 200	●
Canon MV 300	●
Canon MV 400	●
Canon MV 425	●
Canon MV 430	●
Canon MV 450	●

Panasonic

Panasonic NV-DA1	●
Panasonic NV-DS1	●
Panasonic NV-DS5	●
Panasonic NV-DS8	●
Panasonic NV-DS11	●
Panasonic NV-DS12	●
Panasonic NV-DS15	●
Panasonic NV-DS25	●
Panasonic NV-DS27	●
Panasonic NV-DS33	●
Panasonic NV-DS35	●
Panasonic NV-DS37	●
Panasonic NV-DS55	●
Panasonic NV-DS77	●
Panasonic NV-DS88	●
Panasonic NV-DS99	●
Panasonic NV-DX1	●
Panasonic NV-DX100	●
Panasonic NV-EX1	●
Panasonic NV-EX3	●
Panasonic NV-EZ10	●
Panasonic NV-EZ30	●
Panasonic NV-MX1	●
Panasonic MV-MX5	●
Panasonic NV-MX12	●
Panasonic NV-MX400	●
Panasonic NV-MX450	●

JVC

JVC GR-DV1	●
JVC GR-DV3	●
JVC GR-DVF1	●
JVC GR-DVF10	●
JVC GR-DVJ70	●
JVC GR-DVL20	●
JVC GR-DVL30	●
JVC GR-DVL40	●
JVC GR-DVL100	●
JVC GR-DVL108	●
JVC GR-DVL140	●
JVC GR-DVL150	●
JVC GR-DVL300	●
JVC GR-DVL308	●
JVC GR-DVL355	●
JVC GR-DVL450	●
JVC GR-DVL555	●
JVC GR-DVL9000	●
JVC GR-DVL9200	●
JVC GR-DVL9500	●
JVC GR-DVL9700	●
JVC GR-DVM1	●
JVC GR-DVM5	●
JVC GR-DVP1	●
JVC GR-DVX	●
JVC GR-DVX4	●
JVC GR-DVX7	●
JVC GR-DVX8	●
JVC GR-DVX9	●
JVC GR-DVX44	●
JVC GR-DVX77	●
JVC GY-DV500E	●

Thomson

Thomson VMD2	●
Thomson VMD3	●
Thomson VMD8	●
Thomson VMD10	●
Thomson VMD120	●

Metz

Metz CC34	●
Metz CD34	●
Metz CE34	●
Metz CF34	●
Metz CG34	●

Grundig

Grundig DLC1	●
Grundig DLC10	●
Grundig DLC20	●
Grundig DLC1000	●
Grundig DLC1500	●
Grundig DLC1505	●



- not compatible
- restrictions
- compatible

Compatibility list with the DV Max version 2.3

Restrictions

Camcorders With Adaptor

Sony DCR-PC7E	Adaptator VM-LM7
Canon MV 20	Adaptator DU-200
Panasonic NV-DS1	Dockingstation
Panasonic NV-DS5	Dockingstation
Panasonic NV-DS27	Dockingstation
Panasonic NV-DS33	Dockingstation
Panasonic NV-DS35	Dockingstation
Panasonic NV-DS37	Dockingstation
Panasonic NV-DS55	Dockingstation
Panasonic NV-DS77	Dockingstation
Panasonic NV-DS99	Dockingstation
Panasonic NV-DX100	Dockingstation
Panasonic NV-EX1	Dockingstation
Panasonic NV-EX3	Dockingstation
Metz CC34	Adaptator
Grundig DLC1	Adaptator

Restriction

Sony DCR-SC100	Serial Number < 10200
Sony DCR-TRV9E	Serial Number < 52500
Sony DCR-VX1000E	Serial Number < 42300
Sony DCR-VX9000E	Serial Number < 15900
Panasonic NV-DS27	Serial Number < J.....
Panasonic NV-DS88	If bought before 2002
JVC GR-DVL140	If bought before Sept. 01
JVC GR-DVL150	If bought before Sept. 01
JVC GR-DVL355	If bought before Sept. 01
JVC GR-DVL450	If bought before Sept. 01
JVC GR-DVL555	If bought before Sept. 01
JVC GR-DVX44	If bought before Sept. 01
JVC GR-DVX77	If bought before Sept. 01

Camcorder with DVIN in standard

SONY

Sony DCR-IP5
Sony DCR-IP7
Sony DCR-PC8E
Sony DCR-PC9E
Sony DCR-PC100E
Sony DCR-PC101E
Sony DCR-PC110E
Sony DCR-PC120E
Sony DCR-TRV20E
Sony DCR-TRV25E
Sony DCR-TRV30E
Sony DCR-TRV50E
Sony DCR-TRV240E
Sony DCR-TRV330E
Sony DCR-TRV620E
Sony DCR-TRV720E
Sony DCR-TRV730E
Sony DCR-TRV740E
Sony DCR-TRV820E
Sony DCR-TRV828E
Sony DCR-TRV830E
Sony DCR-TRV900E
Sony DCR-TRV950E
Sony DCR-PDX10P
Sony DCR-PD100
Sony DCR-PD150AP
Sony DCR-PD250P
Sony DCR-VX2000E
Sony DCR-RP150AP

Canon

Canon MV 3i
Canon MV 3iMC
Canon MV 4i
Canon MV 4iMC
Canon MV 5i
Canon MV 5iMC
Canon MV 20i
Canon MV 30i
Canon MV 200i
Canon MV 300i
Canon MV 400i
Canon MV 430i
Canon MV 450i
Canon MV 500i
Canon MV 530i
Canon MV 550i
Canon MV X1i
Canon XM-1
Canon XL-1
Canon XL-1S

Grundig

Grundig DLC2000

Thomson

Thomson VMD5
Thomson VMD5GR
Thomson VMD6GR
Thomson VMD9

Panasonic

Panasonic AG-DVC15E
Panasonic AG-DVC200
Panasonic AG-EZ35
Panasonic NV-DS28
Panasonic NV-DS30
Panasonic NV-DS38
Panasonic NV-DS89
Panasonic NV-DS110
Panasonic NV-DS150
Panasonic NV-DS990
Panasonic NV-DS999
Panasonic NV-DX110EG
Panasonic NV-EX215
Panasonic NV-GS3
Panasonic NV-GS5
Panasonic NV-GX7
Panasonic NV-MX7
Panasonic NV-MX8
Panasonic NV-MX300
Panasonic NV-MX350

Thomson VMD20

Thomson VMD22

Thomson VMD130

Thomson VMD140

Thomson VMD160MS

Thomson VMD170

Thomson VMD270FM

Thomson VMX142

JVC

JVC GR-DV300
JVC GR-DV2000
JVC GR-DV3000
JVC GR-DVL107
JVC GR-DVL109
JVC GR-DVL157
JVC GR-DVL167
JVC GR-DVL301
JVC GR-DVL307
JVC GR-DVL309
JVC GR-DVL357
JVC GR-DVL367
JVC GR-DVL557
JVC GR-DVL567
JVC GR-DVL767
JVC GR-DVL867
JVC GR-DVL9600E
JVC GR-DVL9800E
JVC GR-DVLX88
JVC GR-DVP3
JVC GR-DVP7
JVC GR-DVX10
JVC GR-DVX88
JVC GR-DVX407
JVC GR-DVX507
JVC GR-DVX707
JVC GR-DVY550
JVC GR-DV300